
## CARB ATCM Phase 2 Formaldehyde Test - Sample Preparation & Shipping Guide



Cut 4 pieces 16-in (40-cm) long. Stack pieces back to back. Wrap stack in two layers aluminum foil.




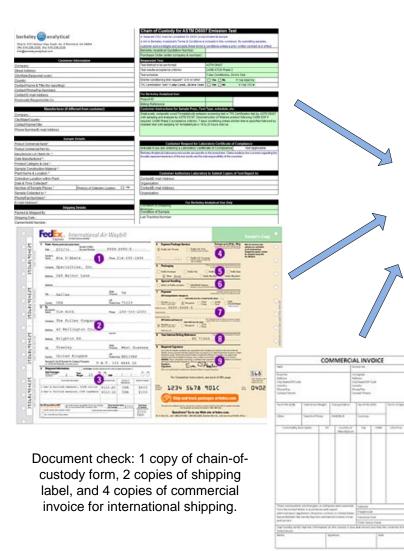

Label sample package – product name & number, date manufactured, lot/batch number, date & time collected



Place sample package in large FedEx box 18-in x12-in x3-in (45-cm x 30-cm x 7.5-cm) or your own box



Ship FedEx International Economy or by other air freight carrier. Ship to:

Berkeley Analytical Attn: Sample Custodian 815 Harbour Way South, Unit 6 Richmond, CA 94804 USA